


OPTONIC P LED

SKU:7311



Thank you for purchasing 7311 Infrared motion sensor!

This product has a good sensitivity detector, and an integrated circuit, SMT. It provides automation, convenience, safety and energy-efficiency. The wide detection field is covered by detectors. It works by receiving human motion infrared rays. When one enters the detection field, it triggers the load at once identifying automatically day and night. This product installation is very easy and its using is usage is wide. It has functions of power indication and the detection indication.

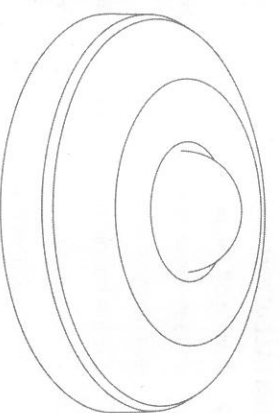

SPECIFICATION:

Power Sourcing: 220V/AC-240V/AC	Detection Range: 360°
Power Frequency: 50-60Hz	Working Temperature: -20~+40°C
Ambient Light: <10-2000LUX (Adjustable)	Working Humidity: <93%RH
Time-Delay: min: 10sec±3sec	Installing Height: 2.2m~4m
Max: 7min±2min	Detection Motion Speed: 0.6~1.5m/s
Rated Load: 100W (LED lamp)	Detection Distance: max. 6m (<24°C)


FUNCTION:

- Can identify day and night: The consumer can adjust work ambient light. It works in the daytime and at night when it is adjusted on the "+(sun)" position (max). It work in the ambient light less than 10LUX when it is adjusted on the "-(moon)" position (min). As for the adjustment pattern, please refer to the testing instructions.
- Time-Delay is added continually: When it receives the second induction signals after the first induction, it will compute time once more on the basic of the first time-delay rest.
- Time-Delay is adjustable. It can be set according to the consumer's preferences. The minimum time is 10sec±3sec. The maximum is 7min±2min.

www.OPTONICALED.com


INSTALLATION (see the diagram)

- Switch off the power completely.
- Please move the upper cover with anti-clockwise whirl as per the diagram in the crust.
- Fix the bottom on the selected position with the inflated screw
- Connect the power and the load to sensor as per the connection-wire sketch diagram.
- Button the upper cover on the sensor, whirling the cover clockwise, switch on the power and test it.

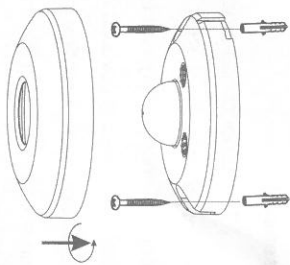


CONNECTION-WIRE SKETCH DIAGRAM

(See the right figure)

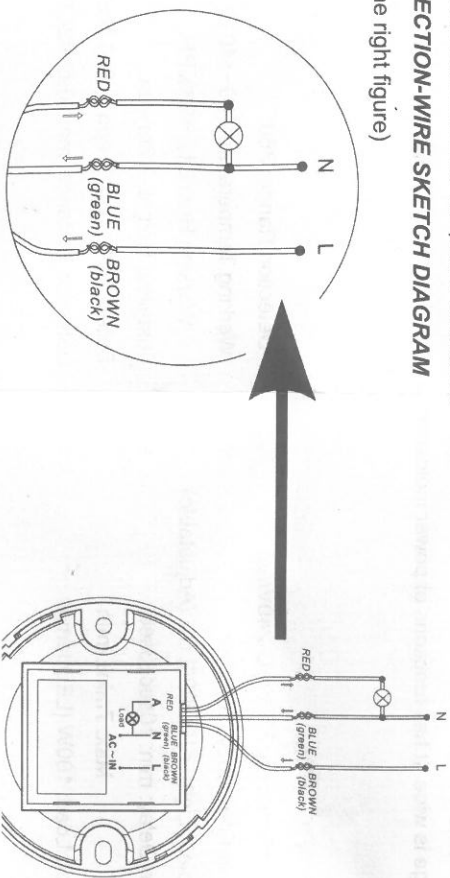

TEST:

- Turn the LUX knob clockwise on the maximum (+ sun), turn the TIME knob anti-clockwise on the minimum.
- When you switch on the power, the controlled load is not working. Preheat 30 seconds later, when the sensor gets the induction signal, the load will be turned on. After the load is turned off, it will be turned on again when the sensor gets induction signal within 5~15 sec.
- After the first is out, make it sense again after 5~10sec. The load should work. When there is no inductor signals in the sensor, the load should be stopped working within 5-15sec.
- Turn ambient light knob anti-clockwise on the minimum. If it is adjusted in the less than 10LUX, the inductor load should not work after load stop working. If you cover the detection window with the opaque objects (towel etc), the load work under no induction signal condition, the load should stop working within 5-15sec.

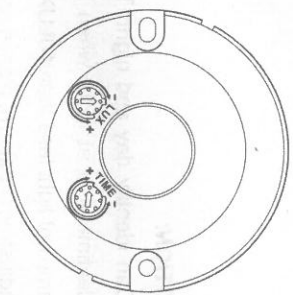

Note: when testing in daylight, please turn LUX knob to “+” (SUN) position, otherwise the sensor lamp could not work!

NOTES:

- This product should only be installed by qualified electrician.
- This product should not be installed on an unstable surface.
- Don't place any objects in front of the detection window as they will interfere with the detection operation.
- Avoid installing it near air temperature alteration zones for example: air conditioners, central heating, etc.
- For your safety, Please don't open this product before switching off the power completely.
- In order to avoid the unexpected damage of product, please add a safe device of 6A when installing infrared sensor, for example, fuse, safe tube etc.

TROUBLESHOOTING:

- In case when the load doesn't operate:
 - a. Check the power if the connection-wiring of power and load is correct.
 - b. Please check if the load is good.
 - c. please check if the working light sets corresponds to the ambient light.
- The sensitivity is poor:
 - a. Please check if in front of the detection window there are foreign objects that effect signal reception.
 - b. Please check if the ambient temperature is too high.
 - c. Please check if the signals source is in the detection fields.
 - d. Please check the installation height.
- The sensor can't shut automatically the load:
 - a. If there are continual signals in the detection fields.
 - b. If the time delay is set to the longest.
 - c. If the power corresponds to the instruction.
 - d. If the air temperature changes near the sensor, air condition or central heating etc.